


STARTER RELAY


INSPECTION OF STARTER RELAY

LOCATION: The relay is located in the No. 1 junction block on the driver's side.

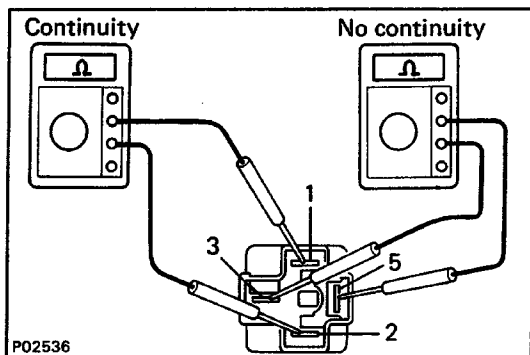

1. INSPECT RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
 - (b) Check that there is no continuity between terminals 3 and 5.
- If continuity is not as specified, replace the relay.

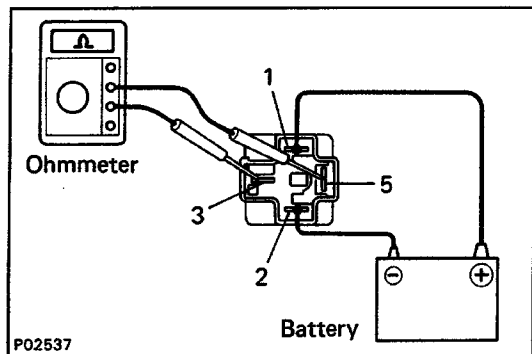

2. INSPECT RELAY OPERATION

- (a) Apply battery voltage across terminals 1 and 2.
 - (b) Check that there is continuity between terminals 3 and 5.
- If operation is not as described, replace the relay.

CLUTCH START SWITCH (M/T only)

(See page [CL-4](#))